


D-4130-SM  
AIR BODY SAW

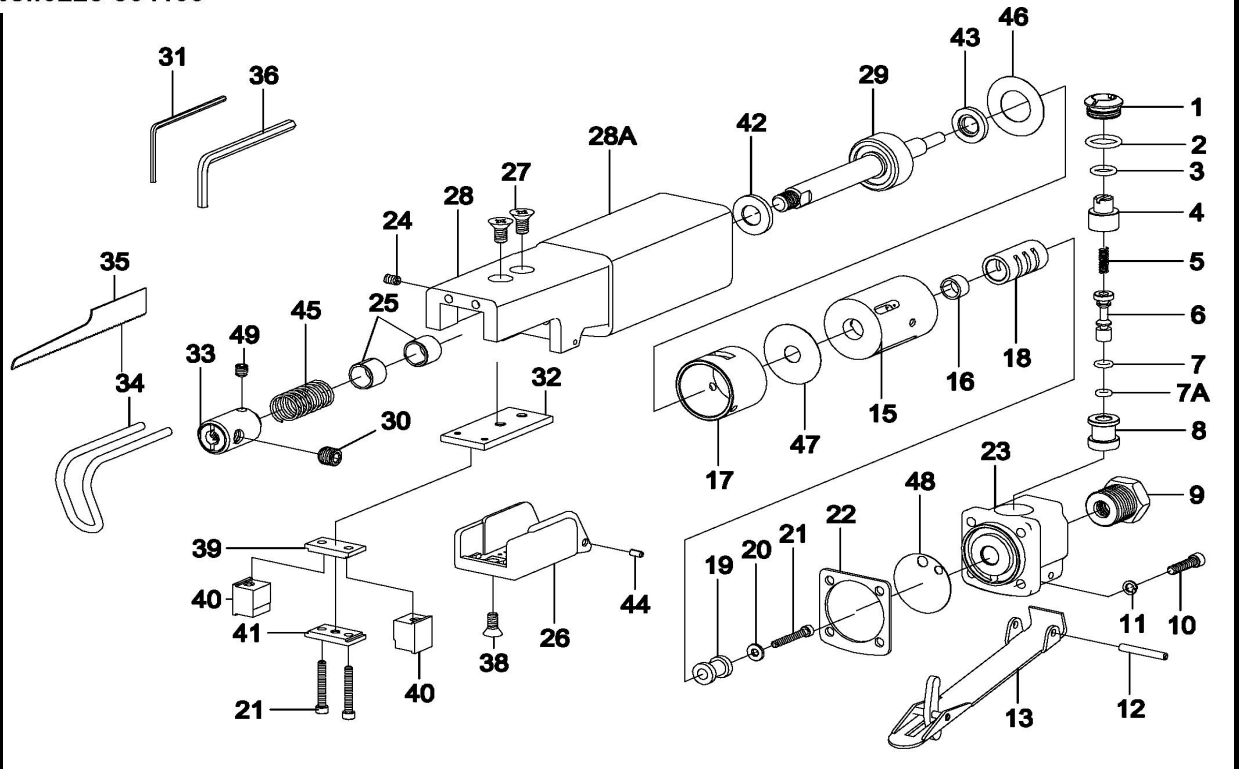

No.	Parts No.	Description	Q'ty	No.	Parts No.	Description	Q'ty
1	D41306611F-01	Valve Screw	1	27	D41306611F-27	Screw	2
2	D41306611F-02	O-Ring	1	28	D41306611F-28	Housing	1
3	D41306611F-03	O-Ring	1	28A	D41306611F-28A	Plastic Wrapp	1
4	D41306611F-04	Air Controller	1	29	D41306611F-29	Piston Ass'y	1
5	D41306611F-05	Valve Spring	1	30	D41306611F-30	Set Screw	2
6	D41306611F-06	Valve Stem	1	31	D41306611F-31	Service Wrench (2mm)	1
7	D41306611F-07	O-Ring	1	32	D41306611F-32	Guide Plate	1
7A	D41306611F-07A	O-Ring	1	33	D41306611F-33	Blade Chuck	1
8	D41306611F-08	Valve Bushing	1	34	D41306611F-34A	Work Guide (Long)	1
9	D41306611F-09	Inlet Bushing	1		D41306611F-34B	Work Guide (Short)	1
10	D41306611F-10	Cap Screw	4	35	D41306611F-35A	Blade (32T)	1
11	D41306611F-11	Washer	4		D41306611F-35B	Blade (24T)	1
12	D41306611F-12	Lever Pin	1	36	D41306611F-36	Service Wrench (4mm)	1
13	D41306611F-13	Throttle Lever	1	38	D41306611F-38	Screw	1
15	D41306611F-15	Valve Case	1	39	D41306611F-39	Upper Wear Shoe	1
16	D41306611F-16	Bush	1	40	D41306611F-40	Blade Guide	2
17	D41306611F-17	Cylinder	1	41	D41306611F-41	Bridge	1
18	D41306611F-18	Valve Sleeve	1	42	D41306611F-42	Front Bumper	1
19	D41306611F-19	Actuate Valve	1	43	D41306611F-43	Rear Bumper	1
20	D41306611F-20	Washer	1	44	D41306611F-44	Roll Pin	2
21	D41306611F-21	Cap Screw	3	45	D41306611F-45	Spring	1
22	D41306611F-22	Gasket	1	46	D41306611F-46	Packing	1
23	D41306611F-23	Valve Block	1	47	D41306611F-47	Packing	1
24	D41306611F-24	Set Screw	2	48	D41306611F-48	Packing	1
25	D41306611F-25	Bush	2	49	D41306611F-49	Set Screw	1
26	D41306611F-26	Chuck Cover	1				