


6. Spare Part List

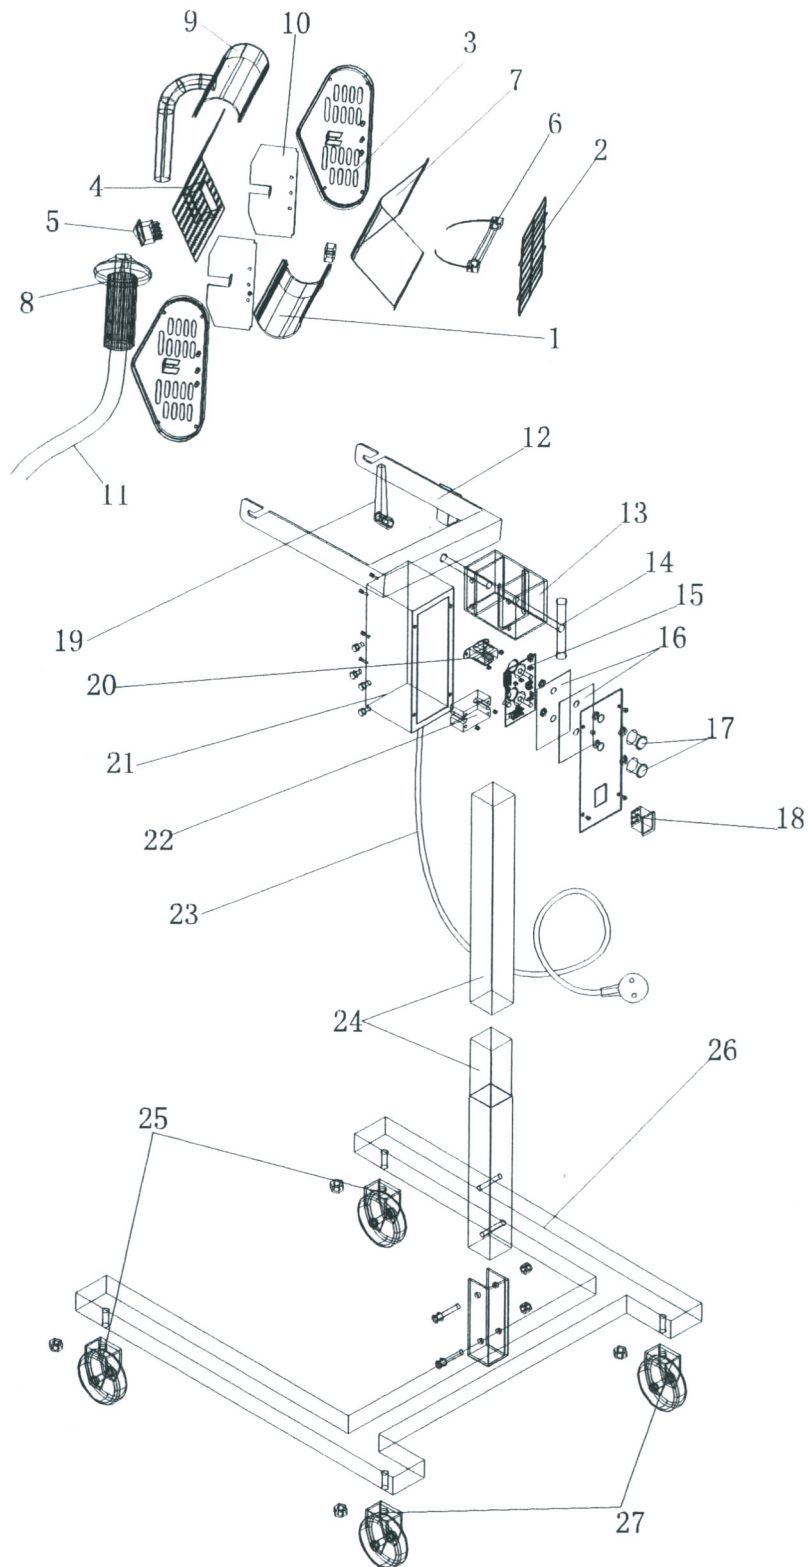

Part list IR-B01					
S/N	Name of Parts	Item No	S/N	Name of Parts	Item No
1	Bent Plate	B01-1	15	Control Box	B01-15
2	Front Protective Net	B01-2	16	Insulation paper	B01-16
3	Side Panel of Emitter	B01-3	17	Small Button	B01-17
4	Rear Protective Net	B01-4			
5	Large Rocker Switch(Red)	B01-5	18	Large Rocker Switch(Red)	B01-18
6	Lamp Tube	B01-6	19	AM12 Adjustable Handle	B01-19
7	Main Reflector Panel	B01-7	20	230V/6W Transformer	B01-20
8	Rubber handle	B01-8	21	Control Box	B01-21
9	Bent Plate with Handle	B01-9	22	10A solid Relay	B01-22
10	Small Reflector Panel	B01-10	23	3*1.0 mm Power wire	B01-23
11	3*0.75mm Power Wire	B01-11	24	Square-tube Column	B01-24
12	U-Shape Support	B01-12	25	Front Wheel	B01-25
13	Locking Ring	B01-13	26	Pedestal	B01-26
14	Locking Ring with handle	B01-14	27	Real Wheel	B01-27